


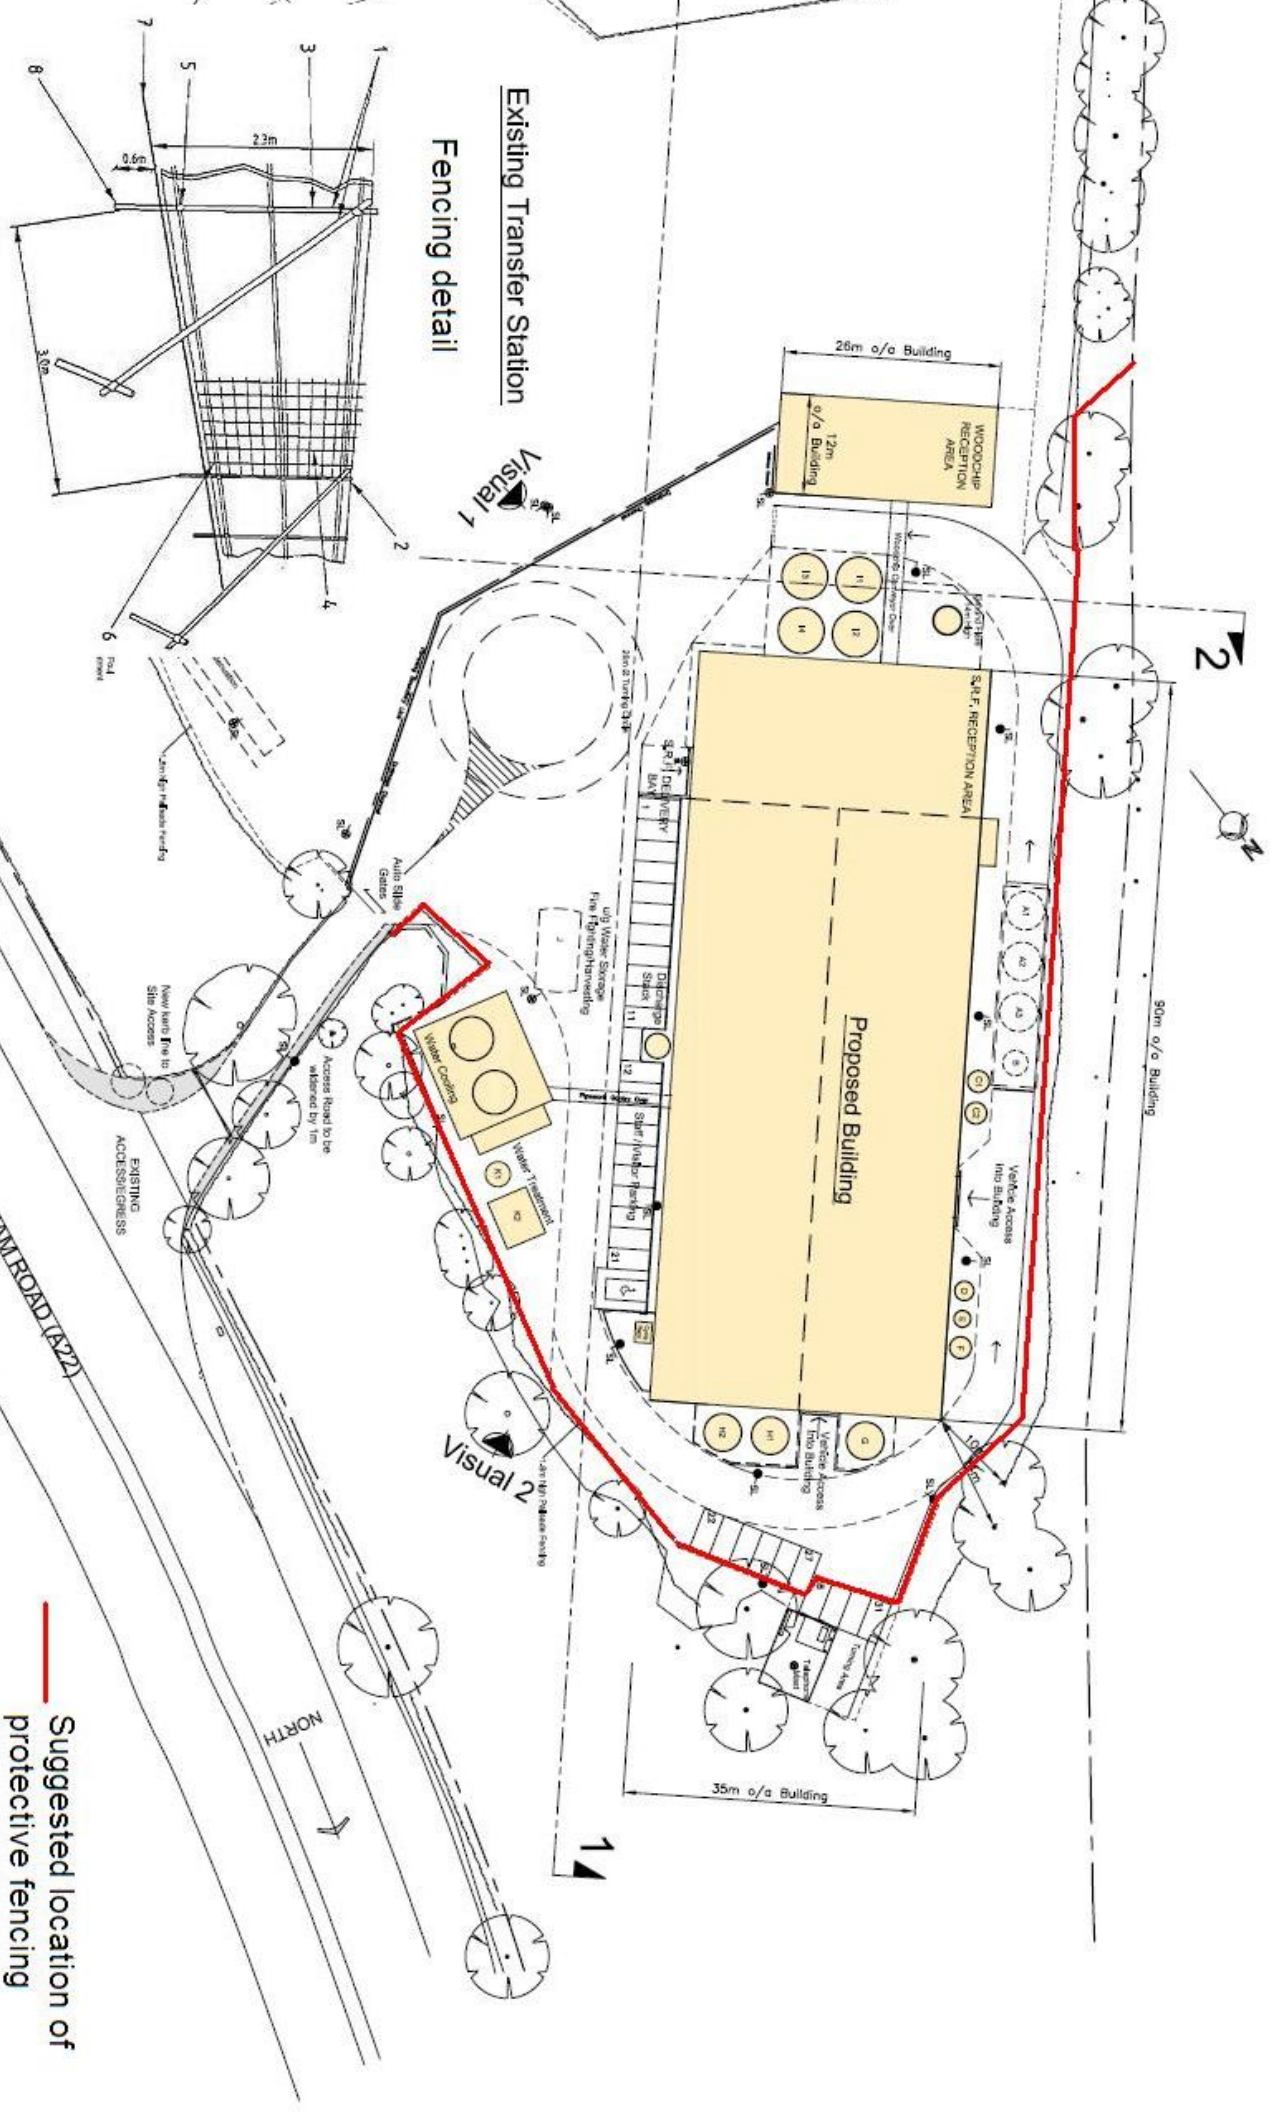

Existing Transfer Station Fencing detail

- 1 Scaffold poles
- 2 Uprights, to be driven into ground
- 3 Panels, secured to uprights with wire ties and where necessary scaffold clamps
- 4 Weldmesh, wired to the uprights and horizontals
- 5 Clamp
- 6 Wire, twisted and secured
- 7 Ground level
- 8 Approx 0.6 m driven into the ground

— Suggested location of
protective fencing